

Notice: With conventional steam ironing, water may leak from the soleplate if too low a temperature has been selected. If this happens, turn the temperature control (1) to the advised position. Steam will recommence as soon as the appropriate temperature has been reached.

BURST OF STEAM

This function provides an extra amount of steam to remove stubborn wrinkles.

- Fill the water tank as previously described.
- Turn the temperature control (1) to the 'MAX' position
- The pilot light (6) goes out when the required temperature is reached.
- The iron is ready for use.
- Press the burst of steam button (2) once.
- Steam will penetrate into the garment removing the wrinkles.
- Wait a few seconds before pressing the burst of steam button again when there are stubborn wrinkles.

DRY IRONING

- Plug the iron into a suitable power socket.
- Ensure the steam control (7) is in the 'O' position.
- Select the setting on the temperature control (1).
- When the pilot light goes out the required temperature has been reached.
- The iron is ready for use.

THE IRON MUST BE USED AND RESTED ON A STABLE SURFACE

CARE AND CLEANING

- Turn the temperature control (1) to 'OFF' then disconnect the iron from the power socket and allow it to cool down completely.
- The casing can be wiped with a damp cloth and then polished with a dry cloth.
- Never use any abrasives to clean the soleplate.
- Keep the soleplate smooth, avoid contact with metal objects.

STORAGE

- Turn the temperature control (1) to the ● setting and the steam control (7) to the 'O' position (no steam).
- Disconnect plug from the power socket.
- Pour any remaining water out of the water tank.
- Stand the iron in the upright position and let it cool down completely.
- Always store iron in an upright position.

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating.

SPECIFICATION:

Model No: IG3112

Supply voltage: 240V~50Hz

Power consumption: 1200W

IGENIX

Distributed by Igenix, Ipswich IP3 9RR. Tel: 01473 271272

IGENIX

1200W Steam/Spray Iron
Model Number: IG3112

INSTRUCTIONS FOR USE



Thank you for purchasing this product.
Please read these instructions carefully before using

IGENIX

1200W Steam/Spray Iron

Model Number: IG3112

IMPORTANT SAFETY INSTRUCTIONS

- Please read all instructions carefully before using the iron for the first time.
- Before plugging-in the iron, check if the voltage indicated on the rating label corresponds with the mains voltage in your home.
- Do not use the iron for anything other than its intended use.
- The iron should always be switched off with the temperature control dial (1) before connecting or disconnecting from the power supply.
- Do not pull on the cord to disconnect the plug from the wall socket.
- Do not use the iron if it is damaged in any way. Do not use the iron if the power cord or plug are damaged. Do not replace the power cord or any other parts yourself.
- When you have finished ironing, or when leaving the iron unattended, turn the steam control knob (7) to the 'O' position and the temperature control dial (1) to OFF.
- stand the iron upright
- disconnect the iron from the wall socket.
- Do not allow children to touch the iron or power cord when ironing.
- Do not immerse the iron or cord into water or any other liquid.
- Do not touch hot metal parts, hot water or steam as they may cause burning. Take care if you turn the iron upside down, there may be hot water in the tank.
- The plug and cord should not be allowed to touch the soleplate (8). Let the iron cool down completely before putting it away.
- Disconnect the iron from the power socket while filling with water or emptying after use.
- This iron is for household use only.
- When placing the iron on its stand, ensure the surface on which the stand is placed is stable.
- The iron should not be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- This iron is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been

given supervision or instruction concerning use of the iron by a person responsible for their safety.

- Children should not be allowed to play with the iron.
- Some parts of the iron have been slightly greased and so the iron may smoke slightly when switched on for the first time.
- Before using the iron for the first time remove any protective film or stickers from the soleplate. Clean the soleplate with a soft cloth.
- Before ironing for the first time, test the iron using an old piece of fabric to ensure the soleplate and water tank are completely clean.

CHOICE OF WATER

- This iron can be used with normal tap water.
- If the water in your area is particularly hard, it is advised that you use distilled or demineralized water.
- Do not use chemically descaled water or any other liquids for refilling.

HOW TO FILL WITH WATER

- Set the steam control (7) to 'O' and the temperature control dial (1) to 'OFF'.
- Unplug the iron from the power socket and allow it to cool down. Pour water into the filling aperture (5). Fill up to the 'max' mark on the water tank. Do not over-fill.

TEMPERATURE CONTROL SETTING

- Always check garment label for ironing instructions before ironing garment. If the label is missing then the table (right) may help you.
- First sort the laundry; wool with wool, cotton with cotton etc. Start by ironing the fabrics requiring the lowest temperature and progress to the higher ones because the iron heats up quicker than it cools down.
- If the fabric consists of various kinds of fibres (eg. cotton with polyester) you must always select the ironing temperature for the material with the lowest advised temperature.

SETTING THE TEMPERATURE

- Insert the plug in the power socket and stand the iron upright.
- Turn the temperature control dial (1) to the desired temperature setting.

Label	Kind of Textile	Fibre Material
	Synthetic	Acrylic Modacryl Polypropylene Polyurethane
	Synthetic	Acetate Triacetate
	Synthetic	Cupro Polyamide (nylon) Polyester Modal Viscose (Rayon)
	Silk	Silk
	Wool	Wool
	Cotton	Cotton
	Linen	Linen

- When the desired temperature has been reached the pilot light (6) will go out. The pilot light will turn on and off from time to time, indicating that the selected temperature is being maintained.

SPRAYING

This function can be used any time and does not affect the ironing temperature.

- Fill the tank with water as described previously.
- Aim the nozzle towards the garment.
- Press the spray button (3).

STEAM IRONING

This function can only be used at higher ironing temperatures;


- ●● setting for moderate steam
- ●●● setting or 'MAX' for maximum steam
- Fill water tank as previously described.
- Stand the iron upright.
- Plug iron into a suitable power socket.
- Turn the temperature control dial (1) to the ●● setting, or the ●●● setting or 'MAX' setting.

- The pilot light (6) goes out when the desired temperature has been reached. The iron is ready for use.
- Turn the steam control (7) to the required position, steam starts coming out of the holes in the soleplate.

IG3112 STEAM/SPRAY IRON – AT A GLANCE



1. Temperature Control
2. Burst of Steam Button
3. Spray Button
4. Spray nozzle
5. Water Fill Aperture
6. Pilot Light
7. Steam Control
8. Soleplate
9. Water Tank

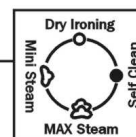

continued overleaf