

# IGENIX

## 1.7 Litre White Cordless Jug Kettle : IG7170

**IMPORTANT:** This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

### IMPORTANT

**Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your home.**

**Read these instructions carefully, in conjunction with the illustrations before using the appliance.**

- There are no user serviceable parts inside. The casing should not be opened by an unqualified person.
- Do not operate the appliance without load to avoid damaging the heat elements.
- Unplug from the outlet when not in use.
- Do not let the cord hang over edge of table counter or touch hot surface.
- Do not place on or near a hot gas or electric burner.
- Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- Ensure that kettle is used on a firm and flat surface where the children can't touch.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful when opening the lid for refilling when the kettle is hot.
- Close supervision is necessary when any appliance is used by or near children.
- Do not touch the hot surface. Use the handle or the button.

- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy.
- The use of accessory attachments, that are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- While boiling water, avoid contact with steam from the spout. Do not be anxious to uncover the lid.
- Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed whilst boiling.
- If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid a hazard.

- Do not use the appliance for anything other than intended use.
- The kettle can only be used with the base provided.
- If the kettle is overfilled, boiling water may be ejected.
- The kettle is for household use only, not for outdoor use.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels and other residential type environments;
- Children should be supervised to ensure that they do not play with the appliance.

### BEFORE USING YOUR KETTLE

**If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.**

### HOW TO USE

- To fill the kettle, remove it from the power base and open lid by lifting lid handle, fill with the desired amount of water to the water kettle. Always fill the kettle between the minimum (0.5L) and maximum (1.7L) marks.

Too little water will result in the kettle switching off before the water has boiled.

**NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.**

- Position the kettle on the power base.
- Connect the plug into a power outlet.
- Press the switch button on the handle.

The indicating light will light up. Then start to boil the water. The kettle will switch off automatically once the water has boiled. You can shut off the power by pressing the switch button at any time

**NOTE: Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.**

- Lift the kettle from the power base and then pour the water.

**NOTE: operate carefully when pouring the water from your kettle as boiling water may result in scalding. Don't open the lid while the water in the kettle is hot.**

**NOTE: Ensure power supply is turned off when kettle is not in use.**


### CLEANING & MAINTENANCE

- Always disconnect the appliance from the power outlet before cleaning. Never immerse the kettle area or cord in water, or allow moisture to contact with these parts.

#### Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, use Liquid Descaler, a simple to use, non-toxic cleaner. Chemicals, Detergents or any abrasive cleaning powder, pads or polish of any kinds must not be used as it may damage the kettle.

### IG7170 1.7LTR WHITE CORDLESS JUG KETTLE – AT A GLANCE

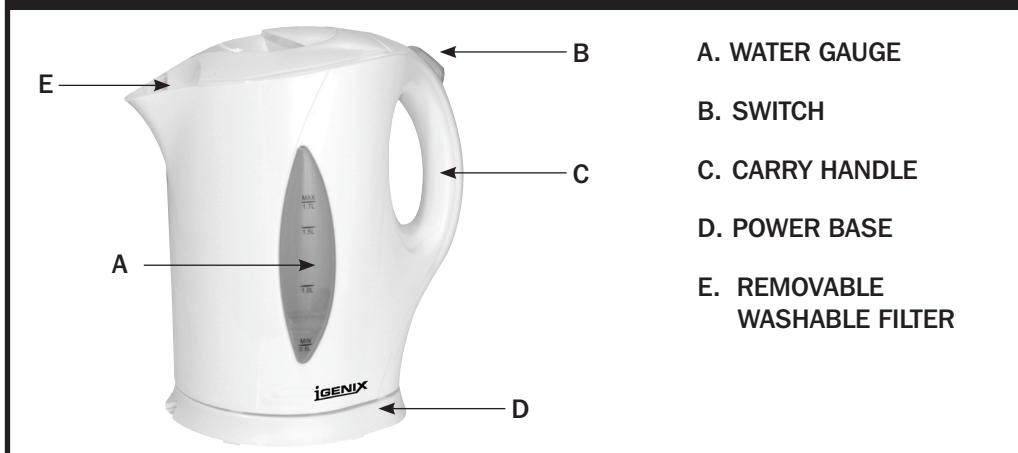

A. WATER GAUGE

B. SWITCH

C. CARRY HANDLE

D. POWER BASE

E. REMOVABLE WASHABLE FILTER

# IGENIX

## 1.7 Litre White Cordless Jug Kettle Model Number: IG7170

### SPECIFICATION

**1.7 Litre White Cordless  
Jug Kettle**

**Model No: IG7170**

**240V~50Hz**

**Max. Wattage: 2.2kW**

## INSTRUCTIONS FOR USE



**Thank you for purchasing this product.  
Please read these instructions carefully before using**

### ENVIRONMENT

*Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available.  
If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.*

# IGENIX

Distributed by Igenix, 38 Bluestem Road,  
Ransomes Europark, Ipswich IP3 9RR.  
Tel: 01473 271272