


JANGRO Product Guide



Degreasing Powder BB100-10




Fat Fryers

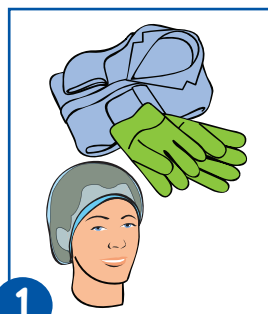

1 Put on PPE.



2 Place safety signs.

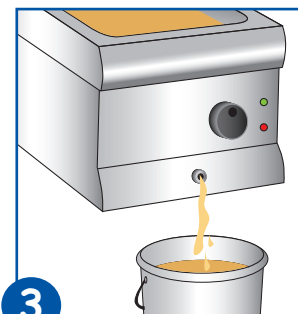

3 Drain out oil.



4 Add 60 grams of powder to 5 litres of water.



5 Fill to level of fat fryer.




6 Bring to the boil. Simmer for 10 minutes.



7 Drain out solution.



8 Rinse with clean water.

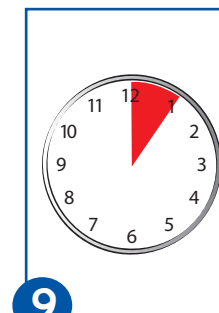

9 Rinse with clean water.



10 Remove safety signs.

Health & Safety

Please refer to relevant COSHH Sheet.