



Oasis Pro 61D Premium ACID CLEANER DISINFECTANT



The **Oasis Pro Premium** professional cleaning system provides ultra-concentrated products for high-end performance. **Oasis Pro 61D Premium** (patent pending) is specially formulated to provide exceptional cleaning results throughout bathrooms. It efficiently removes soils from toilet bowls, urinals and shower walls. **Oasis Pro 61D Premium** leaves behind a fresh fruity scent.

Oasis Pro 61D Premium possesses a broad disinfection efficacy: bactericidal according to EN 1276 at 2% / 5 minutes; bactericidal according to EN 13697 at 10% / 5 minutes; yeasticidal according to EN 1650 at 10% / 15 minutes.

- **Clean** - Outstanding removal of lime scale, soap build-up and excellent emulsification of body fat and dirt.
- **Safe** - The **Oasis Pro 61D Premium** concentrate pouch is secured in the Ecolab dispenser to prevent misuse and ensure safety.
- **Efficient** - Disinfection and cleaning in one step increases productivity.



USE INSTRUCTIONS

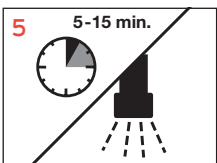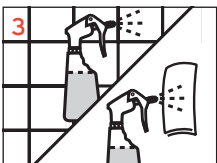

- 1 Check hygiene plan, product label and safety information for detailed use information.
- 2 Wear suitable protective gloves while handling the ready-to-use solution.
- 3 Spray **Oasis Pro 61D Premium** by using a foam sprayer on surface.
- 4 Clean surface. Wipe with wet sponge/ cloth.
- 5 Leave in contact for 5 - 15 minutes. Rinse surface with clean water.

SPECIAL NOTES / INFORMATION

For professional use only!

Prepare ready-to-use solution by using the Ecolab Dosing Equipment.

Do not use on water and acid sensitive surfaces. Before cleaning tiles, pre-wet joints with water. Remove drops or splashes immediately and rinse thoroughly. Test material compatibility in a small inconspicuous area before use.

Recommended use-concentration:
2 - 10 % depending on soil level, water hardness and EN Norms.

Active ingredients:

100 g liquid contains:

2.45 g

Alkyldimethylbenzylammoniumchlorid and

8.0 g lactic acid

SAFETY INFORMATION

Do not mix with any other product! Wear protective gloves and safety glasses when you exchange the empty pouch with a new one. Dispose of packaging only if emptied and closed. Product residues: see Safety Data Sheet.

Use cleaner disinfectant safely. Always read the label and product information before use.

For further information and safety instructions see product label and safety data sheet.

STORAGE CONDITIONS

Store between 0 and 40°C in original packaging.

PACK SIZE

2 x 2 L (pouch)