

# Ultrane 548

## DESCRIPTION AND GENERAL PROPERTIES

- **Material** Polyurethane foam
- **Length (cm)** 21-27
- **Wrist** Knitted wrist
- **Colour/Color** Black
- **Interior finish** Seamless textile support
- **Exterior finish** Ventilated back
- **Size / EAN** 6 7 8 9 10 11
- **Packaging** 1 pair/bag - 12 pairs/bag - 96 pairs/carton
- **Complementary information** Guaranteed without silicone Contains traces of DMF in compliance with occupational exposure limits



## PERFORMANCE RESULTS

### Certification category 2




3121

### Legends



#### MECHANICAL HAZARDS EN 388

##### PERFORMANCE LEVELS

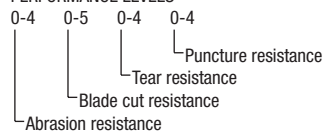

#### LOW CHEMICAL PROTECTION EN 374



#### MICRO-ORGANISMS EN 374



#### SPECIFIC CHEMICAL PROTECTION EN 374

Letter Code	Chemical product
A	Methanol
B	Acetone
C	Acetonitrile
D	Dichloromethane
E	Carbon Disulfide
F	Toluene
G	Diethylamine
H	Tetrahydrofurane
I	Ethyl acetate
J	n-Heptane
K	Sodium hydroxide 40%
L	Sulphuric acid 96%




#### RADIOACTIVE CONTAMINATION EN 421




#### COLD HAZARDS EN 511

##### PERFORMANCE LEVELS



#### HEAT AND FIRE EN 407

##### PERFORMANCE LEVELS

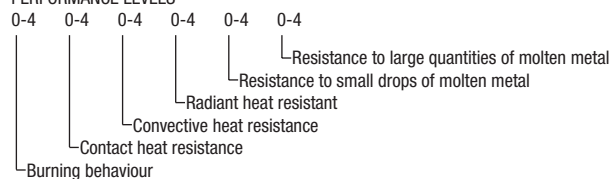

For more details: [www.mapa-pro.com](http://www.mapa-pro.com)

## DESCRIPTION AND GENERAL PROPERTIES

- Thin glove: excellent tactile sensitivity
- Absorption of perspiration ensured by the cellular structure of the polyurethane. In addition, the particularly open texture of the specific lining helps improve hand ventilation
- Anatomical shape: close fit for precision

## MAIN FIELDS OF USE

### Automotive/mechanical industry

- Intricate assembly
- Sorting small parts
- Fitting small screws and fasteners

### Electronics

- Assembly of electrical components
- Microprocessor handling

### Cosmetics and Pharmaceutical industry

- Cosmetics preparation
- Medicine manufacturing

## INSTRUCTIONS FOR USE

### Instructions for use

- It is recommended to check that the gloves are suitable for the intended use, because the conditions of use in the workplace may differ from the tests performed in the laboratory.
- It is not recommended for persons sensitised to natural latex.
- Put the gloves on dry, clean hands.
- Ensure the inside of the gloves is dry before putting them on again.

### Storage conditions

Store the gloves in their original packaging protected from heat, light and humidity.

### Laundering conditions

Caution : using the gloves or submitting them to a cleaning or laundering process that is not specifically recommended can alter their performance levels.

## LEGISLATION

This product is not classified as hazardous according to the directive 1999/45/EC of the European Parliament and of the Council.

This product does not contain any substances of very high concern according to the regulation n° 1907/2006 of the European Parliament and of the Council (REACH).

- CE-Type Examination Certificate  
0075/014/162/01/07/0019

- Issued by the notified body nr  
0075

C.T.C.- 4 rue Herman FRENKEL - F-69367 LYON CEDEX 07